




Product Instruction Manual

Fiji

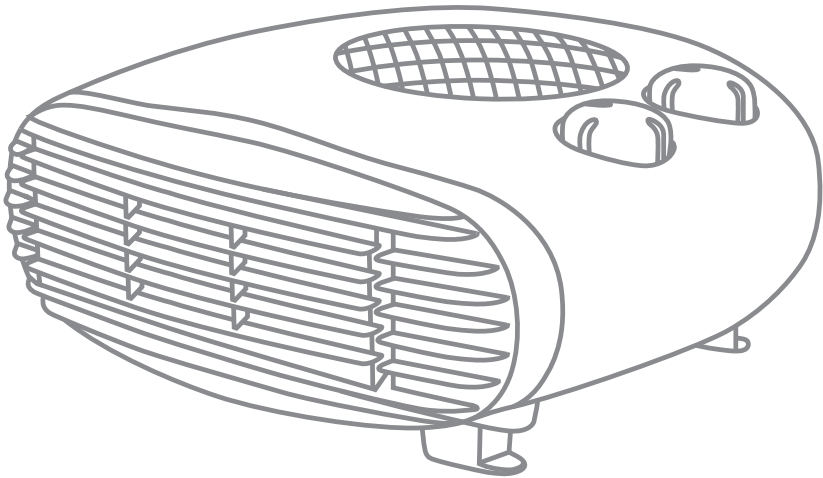

FH-201Z

Fan Heater

This product is only suitable for well insulated spaces or occasional use.











v23.11.4










Overview

Thank you for purchasing a Fiji Fan Heater. It will provide a portable heating solution in the home or office.

Please read and follow these instructions to ensure that installation and operation are as simple and safe as possible.

Important Safety Points

-  Do not use if there are visible signs of damage to the appliance.
-  Do not carry the appliance by the power cord.
-  The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
-  This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children of less than 3 years should be kept away unless continuously supervised.
-  Children aged from 3 years and less than 8 years shall only switch the appliance on/off provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
-  Children aged from 3 years and less than 8 years shall not plug in, regulate, clean the appliance or perform user maintenance.
-  Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
-  Children shall not play with the appliance.
-  Cleaning and user maintenance shall not be made by children without supervision.
-  In order to avoid overheating, do not cover the appliance.

-  Only use this appliance on a horizontal and stable surface.
-  The appliance must be oriented standing on the plastic feet with the control knobs on the top of the unit.
-  The appliance must not be located immediately below a socket outlet.
-  Do not use this appliance with a programmer, timer, separate remote control system or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
-  Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
-  Do not use this appliance in the immediate surroundings of a bath, shower or a swimming pool.
-  This appliance is not designed for outdoor use or use in damp environments.
-  Do not use the appliance on deep pile carpets or rugs; ensure that there is no overhanging surface within 75 cm of the outlet grille.
-  To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

1. Electrical Connection



Do not use if there are visible signs of damage to the appliance.



The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.



Avoid use of an extension cord, the extension cord may overheat and can increase the risk of fire.



Only connect the appliance to an electrical supply that meets the specification detailed on the rating label.














This appliance must be earthed.



Do not use this appliance with a programmer, timer, separate remote - control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

- This appliance is intended solely as a portable appliance; only operate using the power cord and 13 amp plug supplied.
- If the plug needs changing, make connections as below;
 - Green/ yellow earth wire to terminal marked 'E' or ⊕
 - Brown/ red live wire to the terminal marked 'L'
 - Blue/ black neutral wire to the terminal marked 'N'

2. Operation

-  Only use this appliance on a horizontal and stable surface.
 -  The appliance must be oriented standing on the plastic feet with the control knobs on the top of the unit.
 -  Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
 -  In order to avoid overheating, do not cover the heater.
 -  Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
 -  The appliance must not be located immediately below a socket outlet.
 -  Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
 -  This appliance is not designed for outdoor use or use in damp environments.
 -  Do not use the appliance on deep pile carpets or rugs; ensure that there is no overhanging surface within 75 cm of the outlet grille.
 -  To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
 -  The body of the appliance can get very hot during usage, ensure the power cable does not come into contact with it during use.
- Choose from three heat settings:
 - Fan only (cool)
 - 1.0 kW (half power)
 - 2.0 kW (full power)
 - Select the maximum heat setting from the thermostat dial. Once the desired room temperature is achieved adjust the dial down until a click is heard and the element light goes off. This will now maintain the current room temperature.

Safety cut-out

This appliance is fitted with a safety device which switches off the appliance if, for any reason it overheats. In the event of a safety cutout operation, the appliance will blow cold air until the temperature drops low enough for the thermal cutout to close. The cause of the overheating should be established before continuing to use the appliance.

3. Cleaning and Maintenance



Isolate the appliance from the electrical supply and ensure the appliance has cooled down before performing any maintenance task.

- Clean the body of the appliance with a slightly damp, soft cloth only. Do not use excessive amounts of water or abrasive chemicals.
- Use a vacuum cleaner periodically to ensure the air inlet and outlets remain clear of dust or other blockages.

4. Specification

Model	FH-201Z
Power	2 kW
Voltage	230 V
Heat settings	Fan only, 1 kW, 2 kW
Dimensions (h x w x d)	130 x 270 x 280 mm
Weight	1.4 kg

Model identifier (s): FH-201Z					
Item	Symbol	Value	Unit	Item	Unit
Heat output			Type of heat input, for electric storage local space heaters (select one)		
Nominal heat output	P _{nom}	2	kW	manual heat charge control with integrated thermostat	No
Minimal heat output (indicative)	P _{min}	1	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max, c}	2	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption			fan assisted heat output		No
At nominal heat output	el _{max}	0.01	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el _{min}	0.01	kW	single stage heat output and no room temperature control	No
In standby mode	el _{SB}	N/ A	kW	two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	Yes
				with electronic thermostat room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	No
				with distance control option	No
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details :				Hyco Manufacturing Ltd, Castleford WF10 5NR hyco.co.uk	

5. Guarantee and Service Policy

This product is covered by a standard parts or replacement warranty for a period of 12 months from the date of purchase.

If there is a manufacturing defect within the warranty period we will send spare parts, repair and return the unit or, at our discretion, supply a replacement product. Incorrect installation and failure to follow correct operating instructions are excluded. Consequential costs such as labour charges or damage to surroundings are expressly excluded.

6. Contact Us

If you experience a problem with this product you should first contact our service department on 01924 225 200 before taking any further action. Experience has shown that issues can often be resolved without the need to return or uninstall the product.



INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE 2012/19/EU.

At the end of its working life this equipment must not be disposed of as household waste. It must be taken to a local authority waste collection centre or to a dealer providing this service. Disposing of electrical and electronic equipment separately enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed out dustbin.

Hyco Manufacturing Ltd
Normandy Court
Express Way
Castleford, WF10 5NR

hyco.co.uk

T 01924 225 200
E sales@hyco.co.uk